




For use with the Cashmaster One product range

Space saving integrated printer - fits into your Cashmaster One device

Small and quiet

More energy efficient

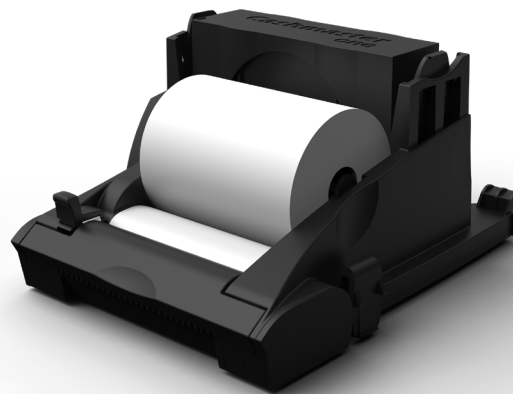

For use with our new range

Cashmaster **one** **pro** **plus** **max**™

Cashmaster *printer one*

The Cashmaster Printer One for the Cashmaster One Product range

The Cashmaster Printer One is smaller, quieter and more energy-efficient than its predecessors. Designed specifically for use with the Cashmaster One range, attach the Cashmaster Printer One with one single click to the base of your device.

No cables or additional worktop space is required, meaning your Cashmaster One device remains fully portable and you can use it whenever you need to.

North America
t: +1 877 227 4627
enquiriesusa@cashmaster.com

Hong Kong and Asia
t: +852 3103 6560
enquiriesasia@cashmaster.com

Germany
t: +49 (0) 2463 999 339
germany@cashmaster.com

UK and all other customers
t: +44 (0)1383 416 098
enquiries@cashmaster.com