

1.

## Cashmaster polymer note and new £1 coin upgrade instructions

Your Upgrade Pack (Instructions & SD card) has been designed to allow you to be 'polymer-ready' in just a few minutes, giving you the dual capability of counting paper and polymer notes. It also enables your devices for the new £1 coin. The upgrade pack is only compatible with Cashmaster machines, see below for system requirements.

### How long will it take?

We have designed the upgrade to be quick and easy to install, you'll be set up and ready to go in under 5 minutes.

### What's in the pack?

- 1 x SD card – containing the upgrade software.
- 1 x Instructions leaflet

This is all you will need to complete your upgrade.

2.

## Before you start

Required items:

- 1 x Cashmaster SD card
  - 1 x Cashmaster Sigma 105, Sigma 170 or Omega 230 device
- Please ensure your device has sufficient battery power before beginning the upgrade.

### Only applies to the Sigma 170 and Omega 230 machines:

Remove the Printer Zero if it is attached to the base of the device, it should be removed for the upgrade (picture 1). This will have to be replaced once the upgrade has been completed.




The process must be carried out fully for **every** Cashmaster device. For example, if you have three machines, the process should be completed three times, once on each machine.

3.

## Installation process

- Switch the Cashmaster OFF. Remove the bottom battery compartment cover (picture 2) or the SD card slot cover in case of the Sigma 105 machine (picture 3).
- Fit the SD card into the SD card slot. (pictures 4 and 5)

2. Sigma 170 & Omega 230

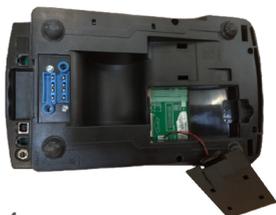

3. Sigma 105



4.



5.




4.

## Begin installation

- Power the machine ON and keep the  key pressed down until the display shows "Update? Press  and  to confirm". (picture 6)
- Then release  key.
- Press both the Coin  and  arrow keys together.

6.

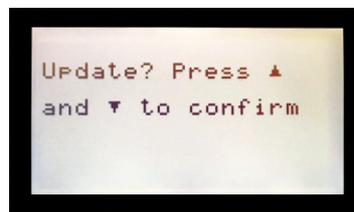

5.

- Your Cashmaster will now update the software and show progress on the screen. (picture 7)
- The Cashmaster will power OFF.
- Power the Cashmaster ON in the normal way.
- The Cashmaster will recognise the new configuration file and begin the update. (picture 8)

7.



8.



- When complete, the 'Configuration Successful' message will appear. (picture 9)

- You will then be prompted to "Please Remove SD Card". (picture 10)

- Remove the SD card and refit the bottom cover.

6.

- Important:** You now need to recalibrate the Cashmaster device with your till cup.


Hold down the ON  and F key  together until the message "Place empty cup on scale." appears and follow the instructions to complete the calibration.

- The upgrade process is now complete.

9.



10.

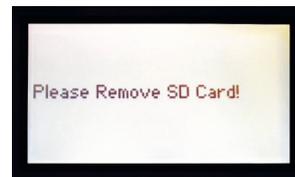

If at any time the display requests you to power OFF and ON again, simply turn the machine OFF, wait a second and then power ON as normal.

**HELPLINE NUMBER:** +44 (0) 1383 410121