


Introduction

An update to your Cashmaster One counter has been released. The update is installed using a USB flash drive, which must first be loaded with the supplied update files.

Pre-requisites

Please ensure your scale has a minimum 50% battery charge level and is connected to the mains power supply.

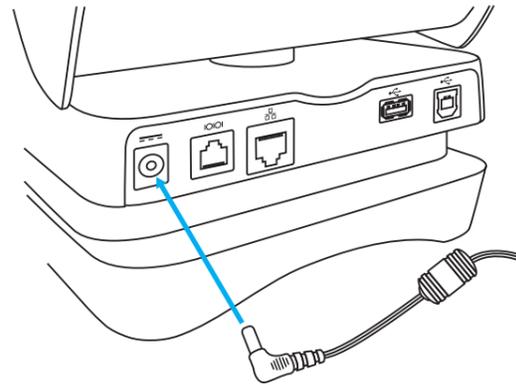

Step 1: Prepare USB flash drive

- 1.1 Insert an empty USB flash drive into your PC's USB port.
- 1.2 Save the update ZIP file that you have received to your PC - for example, on to your Desktop.
- 1.3 Open the ZIP file, and copy all of the contents to your USB flash drive as shown below.



- 1.4 The USB flash drive is now ready to update the Cashmaster One product.





Step 2: Update firmware

- 2.1 Ensure your Cashmaster One product is powered OFF.
- 2.2 Insert the USB flash drive into the USB port on the rear of the Cashmaster One.
- 2.3 Press and hold the power button on the Cashmaster One product for around 4-5 seconds, and release once the power button light illuminates **ORANGE**.
- 2.4 A progress bar will be displayed showing the progress of the firmware update. The firmware update will take 2-3 minutes to complete.
- 2.5 The Cashmaster One product will restart once the firmware update has completed.



Step 4: Verification

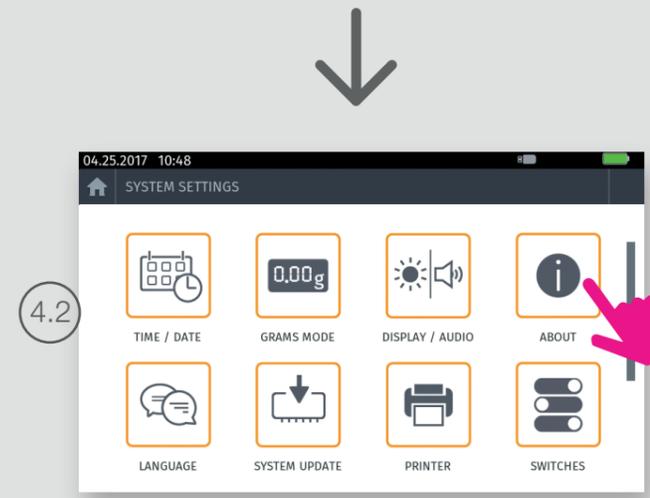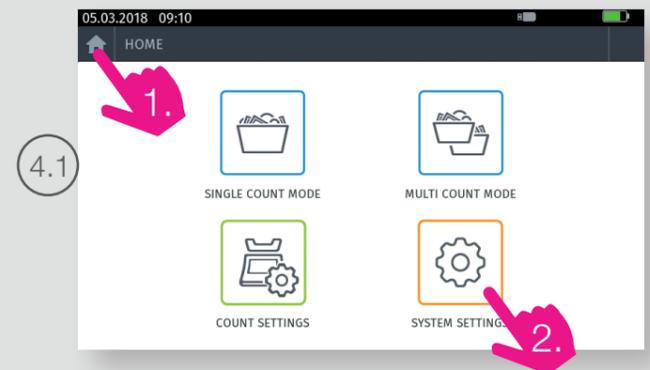

- 4.3 Verify the Firmware number information on the About screen. It should list the updated version of the firmware that you were supplied by Cashmaster. For example, firmware CM9000, revision L:
Firmware: CM9000L *
- 4.4 Congratulations! Your Cashmaster One is updated! You can now remove the USB flash drive and press the 'HOME' button to return to the home menu.

GLOBAL SUPPORT

North America

t: +1 877 227 4627
e: enquiriesusa@cashmaster.com

Germany

t: +49 (0) 2463 999 339
e: germany@cashmaster.com

Hong Kong and Asia

t: +852 2157 9363
e: enquiriesasia@cashmaster.com

UK and all other customers

t: +44 (0) 1383 410 121
e: support@cashmaster.com

cashmaster.com

* The software numbers are provided as an example only.

Cashmaster **one** **pro** **plus** **max**™

Product Firmware Update



cashmaster.com

