



Getting Started

1. Place the Cashmaster on a firm even surface, ensure the tray is empty, press  key.
2. Insert tray pushing down very firmly until it clicks.
3. Calibrating cup or scoop: You may only have one cup weight in machine memory at a time, since these do not weigh the same you need to decide if you will use the scoop or the till cups for coins. Upon first turning unit on, it will prompt for place empty cup. Now place either cup OR scoop on the hod. To re-calibrate scoop or cup, see section on other side.

Keypad

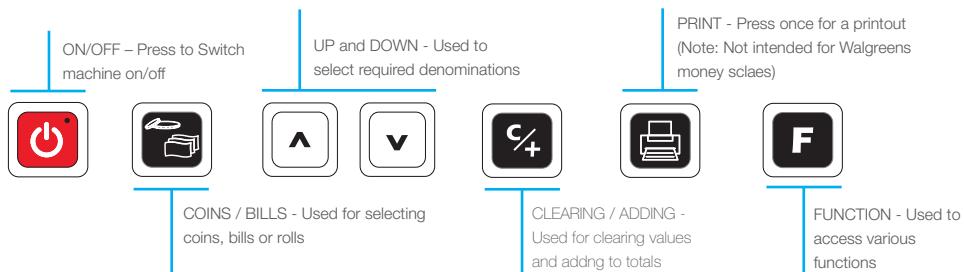

Screen

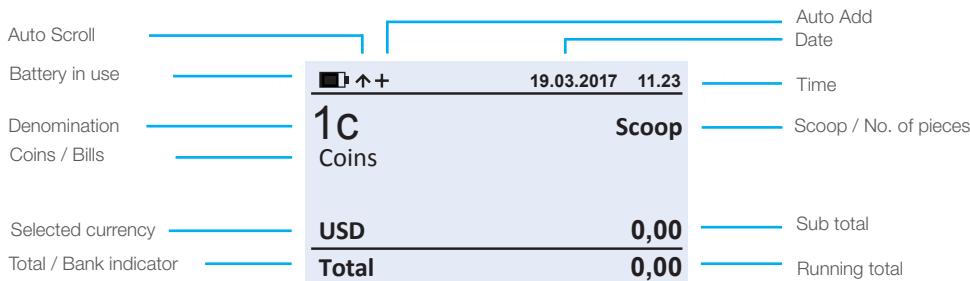

Features

Auto add



Press and hold the 'F' key and press the 'PLUS (C+)' key. This will toggle Auto Add state. "+" will be displayed on the screen when Auto Add is on.

Mobility

The unit has a built in battery for mobile use. Using mobile allows for remote or on floor counting to be done. Remember to recharge after use.

Auto Scroll



Press and hold the "F" key and press the "DOWN" key. This will toggle AutoScroll state. An upward arrow will be displayed on the screen when AutoScroll is on.

Bank On/Off



Press and hold down the 'F' key and press the "UP" key. This will allow Bank mode to be activated or deactivated.

Bank Setting



Press and hold down the 'F' key and press the "Coins/Bills" key. This will allow you to set the Bank amount.

Calibrate Scoop



Press and hold down the "F" key and press the 'ON/OFF' key and follow the onscreen instructions.

Loose Coins

Ensure that the display indicates coin counting mode.

Press either   key to select note counting mode and required the denomination.



1. Place all coins of your selected denomination in the scoop and onto the tray.
- 2a. If auto-add is on, remove the scoop from the tray, and advance to the next denomination.
- 2b. If auto-add is off, press the  key to add to total, remove the scoop and advance to the next denomination.

Rolled Coins

Ensure that the display indicates Rolled Coins counting mode.

Press the coins/bill  key to select Rolled Coins counting mode.

 


1. Place a roll of coins on the tray.
 - 2a. If the roll is "full" the Cashmaster will display the value. Go to step 3
 - 2b. If there is "crossover" or the roll is not "full". You must then select the denomination of coin using the   . Press the  key to confirm. Go to step 3.
 - 3a. If auto-add is on and the roll is "full" the cashmaster will automatically add to total.
 - 3b. If auto-add is on, and the roll is not full, press  key to accept and add total.
 - 3c. If auto-add is off, press the  key to accept the value and add the grand total.
- Advance to the next denomination.

Loose Bills

Ensure that the display indicates bill counting mode.

Press either   key to select note counting mode and required the denomination.



1. Place bills of the selected denomination on the tray (up to 30 at one time). Repeat until all bills in denomination are on the tray.
- 2a. If auto-add is on, remove bills from the tray.
- 2b. If auto-add is off, press  key to add to total, remove the bills and advance to the next denomination.

Advance to the next denomination.

Adding and Viewing Totals

Adding - To add a value, currently on the display, to the total press the  key.

(Use when auto-add function is off).

Clearing the Sub-Totals - Select the denomination to be cleared by using  and  keys then press the  key momentarily.

Clearing Totals - Press and hold the key  until screen prompt shows "Press C key again to confirm". To clear the totals now press the  key again. To cancel clearing press any other key.

Warranty coverage is limited, and does not cover incidents such as drops, spillage, abuse, misplaced AC adapters, and power surges. Please take caution when using.