

GETTING STARTED

1. Place the machine on a firm even surface.
2. Insert the tray pushing down very firmly until it clicks. Plug in the AC adapter (charging takes approximately 3 hours).
3. Ensure the tray is empty then press  key.

FAST KEY FUNCTIONS



Auto-add



Press the "F" and the "C/+ " keys. " + " will be displayed on screen if auto-add is activated.

Switch currency



Press the "UP" and "DOWN" keys to toggle between currencies.

Bank on/off



Press the "F" and "UP" keys. This will activate or deactivate your bank.

Auto-scroll



Press the "F" and "DOWN" keys. "▲" will be displayed on the screen when auto-scroll is activated.

Bank value setting



Press the "F" and the "COINS/BILLS" keys. Then press any arrow key to select a bank value. Use the "+" key to select the digit to be adjusted. Then use any arrow key to decrease or increase the amount. Press the "COINS/BILLS" key to save and exit.

Calibrate scoop



Press the "F" and the "ON/OFF" keys, then follow the on screen instructions.

COUNTING LOOSE BILLS OR COINS

1. Only single denominations can be counted at one time.
2. Press the "COINS/BILLS" key to select either coins or bills counting mode.
3. **COINS:**



Press either   key to select the required denomination. Place coins into the scoop and then onto the tray.

BILLS:

Press either   key to select the required denomination. Place bills on the tray (up to 30 bills at one time).

4. Remove bills/coins from the tray and the machine will automatically advance to the next denomination and add counted value to grand total.

COUNTING ROLLED COINS



1. Press the  key to select Rolled coins counting mode.
2. Place a roll of coins on the tray.
3. If the roll of coins are "good", the value will automatically add to the total.
4. If the word "suspect" is displayed on the screen, select the denomination of the coin using the  or  key. Press the  key to accept and add to the total.
5. The Cashmaster will automatically advance to the next denomination.