



GETTING STARTED

- 1. Place the machine on a firm even surface.
- 2. Insert the hod pushing down very firmly until it clicks. Plug in the AC adapter (Charging takes approximately 3 hours).
- 3. Ensure the hod is empty then press (b) key.

FAST KEY FUNCTIONS







 








__ Auto-Add





Switch Currency

Press the "UP" and "DOWN" keys to toggle between currencies.



 
Float On/Off

Press the "F" and "UP" keys. This will activate or deactivate your float.

Auto-Scroll



Press the "F" and "DOWN" keys.
"♠" will be displayed





Float Selection

Press the "F" and the "COINS/NOTES" keys. Then press any arrow key to select a float.
Use the "+" key to select the digit to be adjusted. Then use any arrow key to decrease or increase the amount. Press the "COINS/NOTES" key to save and exit.



Calibrate Scoop/Till Cup



Press the "F" and the "ON/OFF" keys, then follow the on screen instructions.

COUNTING LOOSE NOTES OR COINS

- 1. Only single denominations can be counted at one time.
- 2. Press the "COINS/NOTES" key to select either coins or notes counting mode.

3. COINS:



Press either \(\bigv \) key to select the required denomination.

Place coins into the till cup/scoop and then onto the hod.

NOTES:



4. Remove notes/coins from the hod and the machine will automatically advance to the next denomination and add counted value to grand total.

COUNTING PACKAGED COINS



- 1. Press the Rey to select Packaged Coins counting mode.
- 2. Place a bag of coins on the hod.
- 3. If the bag of coins are "good", the value will automatically add to the total.
- 4. If the word "suspect" is displayed on the screen, select the denomination of coin using the well key. Press the key to accept and add to the total.
- 5. The Cashmaster will automatically advance to the next denomination.